




INSTALLATION GUIDE

Flush Actuator Plate Celica Pneumatic

Requirements:-

- ◆ Allen key, cutter.
- ◆ Screw driver & flush actuator plate.
- ◆ Hardware & other fasteners ,(included in Box)

**NOTE:THIS INSTALLATION
MANUAL CAB BE REFERRED FOR
FLUSH ACTUATOR PLATES.**






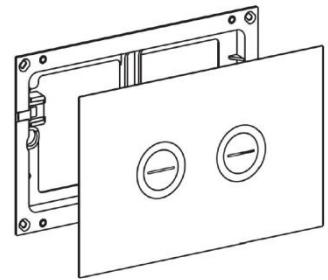






CELICA PNEUMATIC

Note:- *This installation manual can also be referred for following item codes:*

ACP-5012501,ACP-5012503,ACP-5032505,ACP-CHR-5032505PD & ACP-5032505M.

INSTALLATION Steps:-

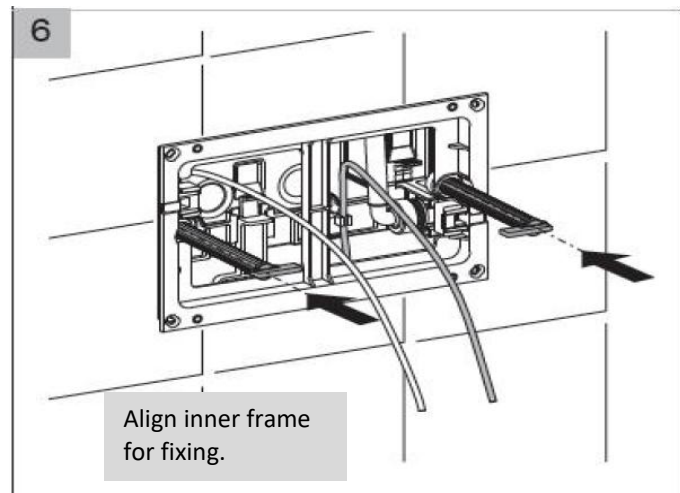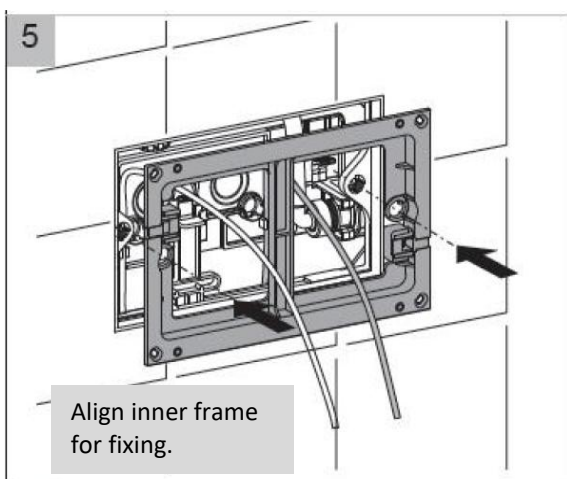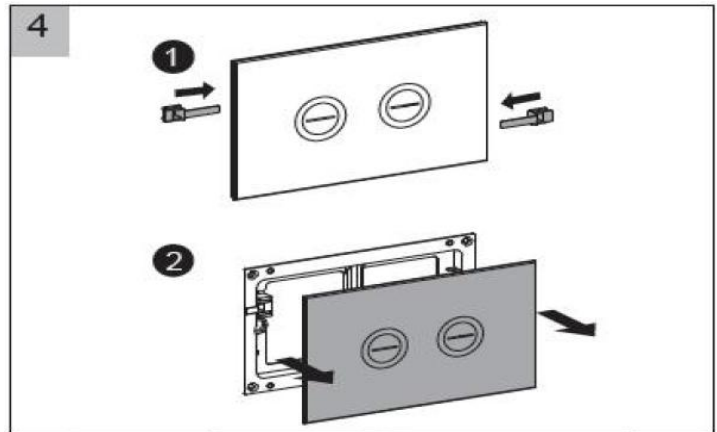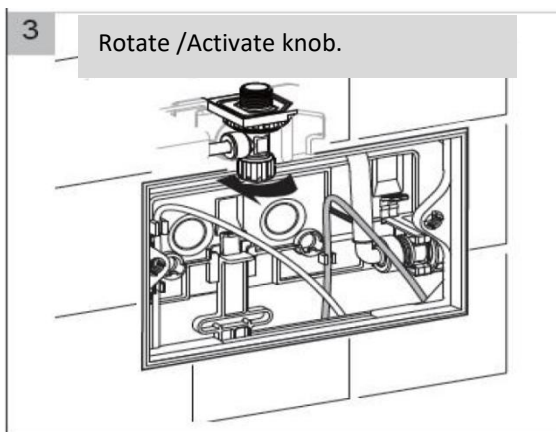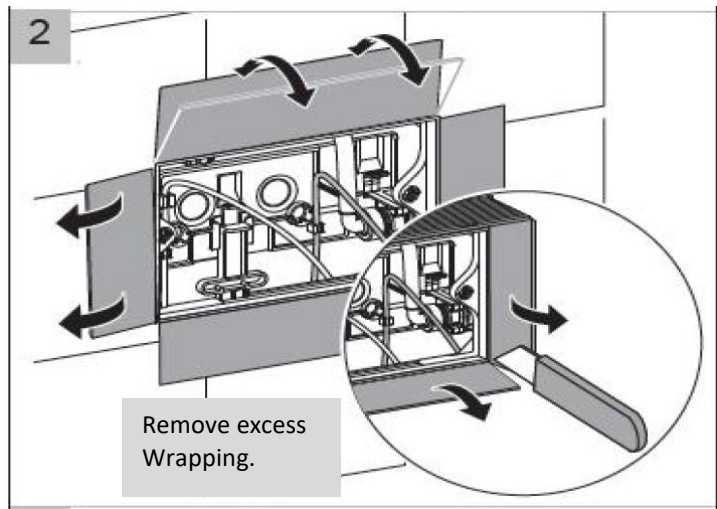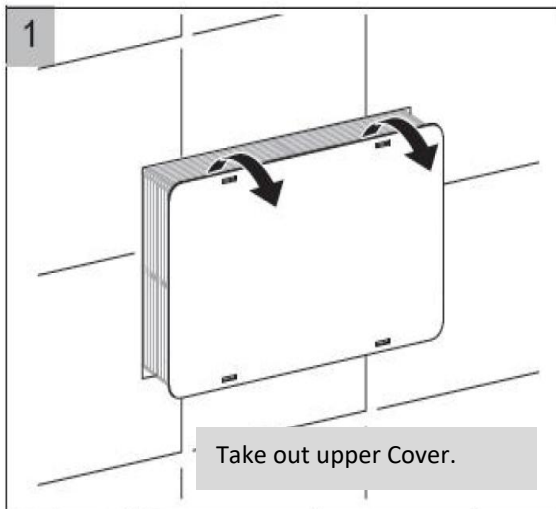

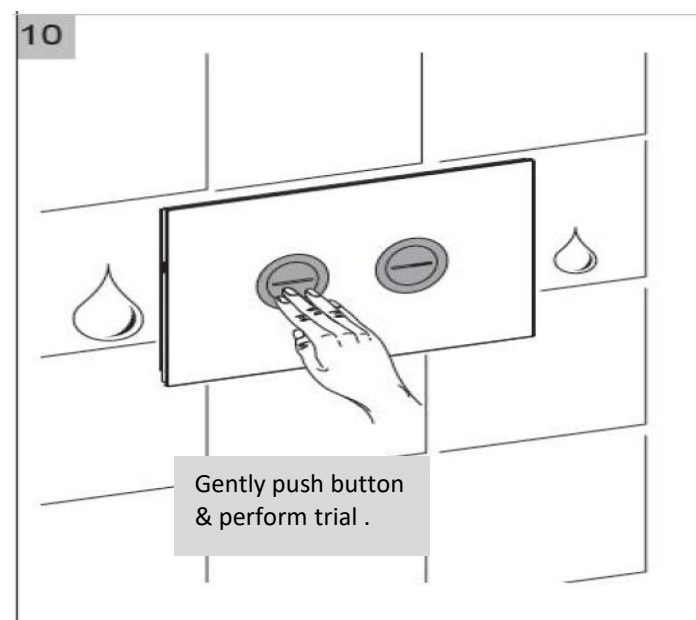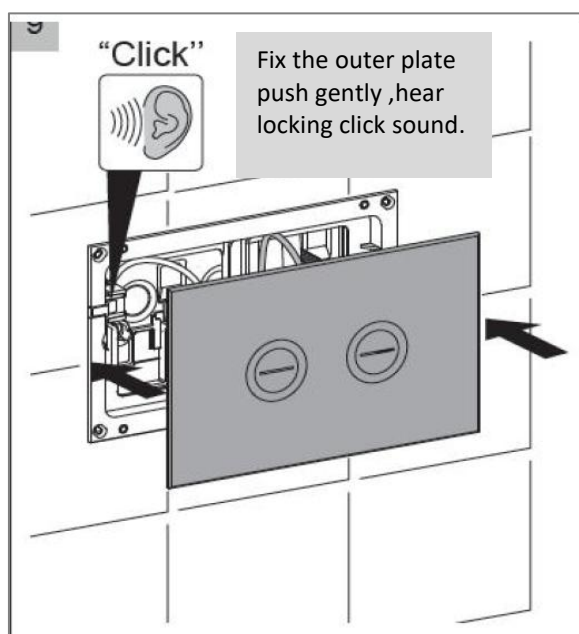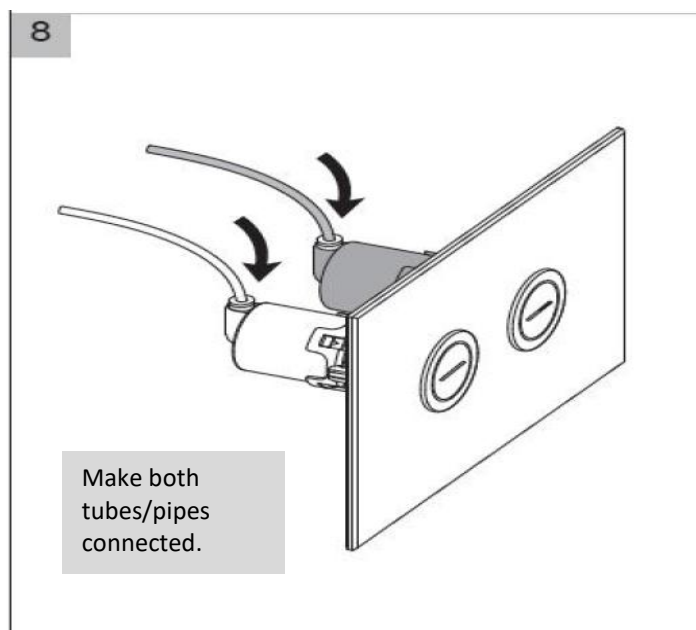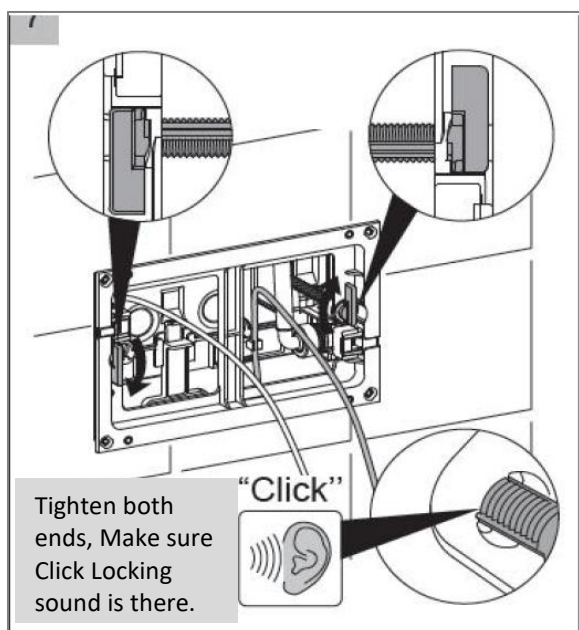

Safety Tips:-

- 1. Turn Off Water Supply** – Ensure the water supply to the cistern is switched off before starting installation.
- 2. Check Power (if sensor/electronic type)** – If it has any electrical components, disconnect the power supply before working.
- 3. Use Proper Tools** – Always use insulated screwdrivers, pliers, and correct size tools to avoid damage or injury.
- 4. Avoid Excessive Force** – Do not over-tighten screws or fittings; it may damage the plastic housing or tiles.

- 5. Handle Sharp Edges Carefully** – Be cautious of metal or tile edges around the mounting area to prevent cuts.
- 6. Follow Manufacturer's Instructions** – Install parts in the correct order as shown in the manual.
- 7. Check Alignment** – Ensure the frame and flush plate are level before fixing to avoid leaks or malfunction.
- 8. Secure Cables & Pipes** – Keep cables and pipes properly aligned to prevent pinching, bending, or leakage.
- 9. Test Before Use** – After installation, check for water leaks and smooth operation of flush buttons.
- 10. Personal Safety** – Wear gloves and safety glasses while cutting, drilling, or handling tools.

You have just installed a "Slim Concealed Cistern with wall mounting frame" from Artize range and we would like to thank you for putting your trust in us.

We are specialist in bathroom technical equipment and accessories and have taken the utmost care in the design and manufacturing of this product.

For any more information or request, please contact your nearest orientation centre or service centre.